

MAINTENANCE OF WOODEN ITEMS

Instructions for the proper cleaning and for the storage of the items

The **periodic and accurate maintenance**, combined with **proper cleaning**, contributes significantly to **prolonging the life and preserving the aesthetics** of wooden products.

The **frequency of maintenance interventions** has to be evaluated based on the specific conditions of use and exposure to atmospheric agents.

It is recommended to use **soft cloths moistened exclusively with water**.

It is possible to use **gentle non-aggressive detergents**, specifically studied for the surfaces being treated.

It is **strongly discouraged** the use of :

- abrasive or alcohol-based detergents,
- pressure washers or high-pressure washing systems,
- sponges or abrasive tools.

It is very important **to promptly remove any liquids and residues** to prevent absorption by the material and the formation of permanent stains.

Any cracks or slight color variations are considered natural phenomena of the wood, related to normal use and environmental conditions. These characteristics are not defects, but rather a natural evolution of the material.

It is recommended **to periodically check the condition of the floor caps, and to lift the product when moving it, avoiding dragging it**, to preserve its integrity.



Hand wash only in cold water is recommended.



Strongly discouraged the use of :

- solvents and abrasive cleaners
- alcohol-based cleaners and bleaches
- polishing spray
- abrasive sponges
- pressure washers



Make sure the product is completely dry before storing it, to avoid the formation of streaks, mold,, etc.